

Final Update : 2007.03.02		Printer Compatibility List	
Printer's Brand	Printer's Type	Print Server Module	
		PN-301U	PN-303U
Avision	MF 3200	•	•
Avision	MF 3230	•	•
Brother	HL1260		•
Brother	MFC4800	•	•
Brother	MFC4800J	•	•
Brother	MFC6800	•	•
Brother	MFC7220	•	•
Brother	MFC7420	•	•
Brother	MFC8840D	•	•
Brother	MFC210C	•	•
Brother	IntelliFax 2820	•	•
CANON	S520		•
CANON	S200SPX	•	•
CANON	I450	•	•
CANON	I550	•	•
CANON	I850	•	•
CANON	I950	•	•
CANON	I255	•	•
CANON	I355	•	•
CANON	I455	•	•
CANON	I470D	•	•
CANON	I475D	•	•
CANON	I560	•	•
CANON	I850	•	•
CANON	I865	•	•
CANON	I905D		•
CANON	I6100	•	•
CANON	I6500	•	•
CANON	I9100	•	•
CANON	I9950	•	•
CANON	IX4000	•	•
CANON	IX5000	•	•
CANON	Imageclass D380	•	
CANON	BJ-330		•
CANON	BJC-620		•
CANON	BJC4200		•
CANON	BJC4300		•
CANON	BJC4550		•
CANON	BJC4650		•
CANON	BJF9000	•	•
CANON	PIXMA ip1000	•	•
CANON	PIXMA ip2000	•	•
CANON	PIXMA ip3000	•	•
CANON	PIXMA ip4000	•	•
CANON	PIXMA ip4200	•	•

CANON	PIXMA ip5000	•	•
CANON	PIXMA ip6000	•	•
CANON	PIXMA ip8500	•	•
CANON	MP-110	•	•
CANON	MP-130	•	•
CANON	MP730	•	•
CANON	MP770	•	•
Citizen	GSX230		•
DATAMAX	I-4208		•
DATAMAX	I-4308		•
DOCUJET	1610F	•	•
DOCUJET	UA1610	•	•
EPSON	C750	•	•
EPSON	CX 1500	•	•
EPSON	LQ-100		•
EPSON	LQ-300		•
EPSON	LQ-300+		•
EPSON	LQ-300+II	•	•
EPSON	LQ-570C		•
EPSON	LQ-1000C		•
EPSON	LQ-1170+		•
EPSON	LQ-1170C+		•
EPSON	LQ-1170C		•
EPSON	LQ-2070C		•
EPSON	LQ-2080C		•
EPSON	LQ-2090		•
EPSON	LQ-2090C	•	•
EPSON	LQ-2170C		•
EPSON	LQ-2180C		•
EPSON	LQ-2550		•
EPSON	LQ-3500C		•
EPSON	LQ-670		•
EPSON	LQ-680		•
EPSON	LQ-680C		•
EPSON	STYLUS C20	•	•
EPSON	STYLUS C40	•	•
EPSON	STYLUS C41UX	•	•
EPSON	STYLUS C43UX	•	•
EPSON	STYLUS C45	•	•
EPSON	STYLUS C60	•	•
EPSON	Stylus C63	•	•
EPSON	Stylus C67	•	•
EPSON	Stylus C83		•
EPSON	Stylus Color 400		•
EPSON	Stylus Color 600		•
EPSON	Stylus Color 670	•	•
EPSON	Stylus Color 800	•	•
EPSON	Stylus Color 810	•	•
EPSON	Stylus Color 850	•	•
EPSON	Stylus Color 900	•	•
EPSON	Stylus Color 1160	•	•

EPSON	Stylus Color 1520	•	•
EPSON	Stylus CX-1500	•	•
EPSON	Stylus CX-2900	•	•
EPSON	Stylus CX-3500	•	•
EPSON	Stylus CX-3700	•	•
EPSON	Stylus CX-3900	•	•
EPSON	Stylus CX-4100	•	•
EPSON	Stylus CX-4700	•	•
EPSON	Stylus CX-4900	•	•
EPSON	Stylus CX-5300	•	•
EPSON	Stylus CX-5900	•	•
EPSON	Stylus CX-6900F	•	•
EPSON	Stylus CX-7800	•	•
EPSON	Stylus Pro 7600	•	•
EPSON	Stylus Photo 915	•	•
EPSON	Stylus Photo 1270	•	•
EPSON	Stylus Photo 1290	•	•
EPSON	Stylus Photo 2100	•	•
EPSON	Stylus Photo 710	•	•
EPSON	Stylus Photo 720	•	•
EPSON	Stylus Photo 790	•	•
EPSON	Stylus Photo 810	•	•
EPSON	Stylus Photo 830U	•	•
EPSON	Stylus Photo 900	•	•
EPSON	Stylus Photo 915	•	•
EPSON	Stylus Photo EX2	•	•
EPSON	Stylus Photo EX3	•	•
EPSON	Stylus Photo R1800	•	•
EPSON	Stylus Photo R210	•	•
EPSON	Stylus Photo R230	•	•
EPSON	Stylus Photo R250	•	•
EPSON	Stylus Photo R310	•	•
EPSON	Stylus Photo R350	•	•
EPSON	Stylus Photo R2400	•	•
EPSON	Stylus Photo RX 430	•	•
EPSON	Stylus Photo RX 510	•	•
EPSON	Stylus Photo RX 530	•	•
EPSON	Stylus Photo RX 590	•	•
EPSON	Stylus Photo RX 630	•	•
EPSON	Stylus Photo RX 650	•	•
EPSON	ACULASER C1900	•	•
EPSON	EPL5700		•
EPSON	EPL5800	•	•
EPSON	EPL5900	•	•
EPSON	EPL6100	•	•
EPSON	EPL6200	•	•
EPSON	EPL-N2120		•
EPSON	LP2500	•	•
EPSON	LP8900	•	•
EPSON	TM T88III		•

FUJITSU	DL-700		•
FUJITSU	DL-900		•
FUJITSU	DL-3400		•
FUJITSU	DL-3800		•
FUJITSU	DL-3850		•
FUJITSU	DL-5800		•
FUJITSU	DL-6400Pro		•
FUJITSU	DL-6800		•
FUJITSU	FP 410		•
FUJITSU	Jet Wind 500C		•
FUJITSU	PP 10		•
FUTEK	F8000		•
FUTEK	F84+		•
FUTEK	F86+		•
HP	Color Laserjet 2605	•	•
HP	Color Laserjet 3700	•	•
HP	DeskJet 400		•
HP	DeskJet 450C	•	•
HP	DeskJet 500		•
HP	DeskJet 670C		•
HP	DeskJet 680C		•
HP	DeskJet 720C		•
HP	DeskJet 810C	•	•
HP	DeskJet 830C	•	•
HP	DeskJet 845C	•	•
HP	DeskJet 920C		•
HP	DeskJet 930C		•
HP	DeskJet 948C	•	•
HP	DeskJet 970CXI	•	•
HP	DeskJet 1120C		•
HP	DeskJet 1125C	•	•
HP	DeskJet 1180C	•	•
HP	DeskJet 1220C	•	•
HP	DeskJet 1280	•	•
HP	DeskJet 3325	•	•
HP	DeskJet 3420	•	•
HP	DeskJet 3535	•	•
HP	DeskJet 3743	•	•
HP	DeskJet 3748	•	•
HP	DeskJet 3650	•	•
HP	DeskJet 3820	•	•
HP	DeskJet 3920	•	•
HP	DeskJet 3940	•	•
HP	DeskJet 5440	•	•
HP	DeskJet 5500		•
HP	DeskJet 5550	•	•
HP	DeskJet 5652	•	•
HP	DeskJet 9300	•	•
HP	DeskJet 9600	•	•
HP	DeskJet 9650	•	•
HP	DeskJet 9800	•	•

HP	Business Inkjet 1000	•	•
HP	Designjet 100	•	•
HP	Designjet 600		•
HP	Designjet 650C		•
HP	Designjet 700		•
HP	Designjet 750C+		•
HP	LaserJet 1022	•	•
HP	LaserJet 1022N	•	•
HP	LaserJet 1100		•
HP	LaserJet 1160	•	•
HP	LaserJet 1200	•	•
HP	LaserJet 1220	•	•
HP	LaserJet 1300	•	•
HP	LaserJet 1320	•	•
HP	LaserJet 2100		•
HP	LaserJet 2200		•
HP	LaserJet 2200D	•	•
HP	LaserJet 2300	•	•
HP	LaserJet 2410	•	•
HP	LaserJet 2420	•	•
HP	LaserJet 2500	•	•
HP	LaserJet 2550	•	•
HP	LaserJet 3015		•
HP	LaserJet 3050	•	•
HP	LaserJet 3020	•	
HP	LaserJet 3200	•	•
HP	LaserJet 3330	•	•
HP	LaserJet 3380	•	•
HP	LaserJet 4000		•
HP	LaserJet 4050		•
HP	LaserJet 4100		•
HP	LasetJet 4250	•	•
HP	LasetJet 4300	•	•
HP	LaserJet 4500		•
HP	LasetJet 4650	•	•
HP	LasetJet 5000	•	•
HP	LasetJet 5000LE		•
HP	LasetJet 5100LE		•
HP	LaserJet 6P		•
HP	LaserJet 8100		•
HP	LaserJet 1005 MFP	•	•
HP	Photosmart 2610	•	•
HP	Photosmart 7150	•	•
HP	Photosmart 7550	•	•
HP	Photosmart 7830	•	•
HP	Photosmart C3180	•	•
HP	Photosmart D5160	•	•
HP	Photosmart D7160	•	•
HP	PSC 1315	•	•
HP	PSC 1350	•	•

HP	PSC 1410	•	•
HP	PSC 1610	•	•
HP	PSC 2210	•	•
HP	PSC 2310	•	•
HP	OfficeJet 4255	•	•
HP	OfficeJet 5510	•	•
HP	OfficeJet 5610	•	•
HP	OfficeJet 6210	•	•
HP	OfficeJet 7210	•	•
HP	OfficeJet K850	•	•
HP	OfficeJet Pro K550	•	•
IBM	Infoprint 20		•
IBM	Infoprint 1116	•	•
IBM	Infoprint 1312	•	•
IBM	Infoprint 1316	•	•
IBM	Infoprint 1332	•	•
IBM	Infoprint 1412	•	•
Konica Minolta	DI 152		•
Konica Minolta	DI 250		•
Konica Minolta	Pagepro 1300W	•	•
Konica Minolta	Pagepro 1350W	•	•
Konica Minolta	Pagepro 1380MF	•	•
Konica Minolta	Pagepro 9100	•	•
Konica Minolta	Magicolor 2400	•	•
Konica Minolta	Magicolor 2450	•	•
Konica Minolta	Magicolor 5450	•	•
Konica Minolta	Magicolor 7300	•	•
Kyocera	FS-1010	•	•
Kyocera	FS-1010KX	•	•
Kyocera	FS-1020	•	•
Kyocera	FS-1920	•	•
Kyocera	FS-720	•	•
Kyocera	FS-820	•	•
Kyocera	FS-920	•	•
Kyocera	FS-6020	•	•
Kyocera	KM-1635	•	•
LEXMARK	E210	•	•
LEXMARK	E322	•	•
LEXMARK	Optra S1250		•
LEXMARK	T420	•	•
LEXMARK	T620	•	•
LEXMARK	C720		•
LEXMARK	C750	•	•
LEXMARK	W812	•	•
LEXMARK	Z43	•	•
LEXMARK	Z45	•	•
LEXMARK	Z55	•	•
LEXMARK	Z615	•	•
LEXMARK	Z705	•	•
LEXMARK	Z42	•	•
LEXMARK	Z515	•	•

LEXMARK	X6170	•	•
MITAC	MP-6600C		•
NEC	Pinwriter P2200		•
NEC	Pinwriter P3200		•
NEC	Pinwriter P5300		•
NEC	PINWRITER P8000C		•
OKI	Microline 391		•
OKI	C3200	•	•
OKI	B4350	•	•
RICOH	NF3570		•
PANASONIC	KX-P1121		•
PANASONIC	KX-P1123		•
PANASONIC	KX-P1124		•
PANASONIC	KX-P1624		•
PANASONIC	KX-P6500		•
SAMSUNG	ML-1520	•	•
SAMSUNG	ML-1710	•	•
SAMSUNG	ML-1750	•	•
SAMSUNG	ML-2010	•	
SAMSUNG	ML-2250	•	•
SAMSUNG	ML-2550	•	•
SAMSUNG	CLP 500	•	•
SAMSUNG	CLP 510	•	•
SAMSUNG	SRP 270		•
SAMSUNG	SCX-4016	•	•
SAMSUNG	SCX-4100	•	•
Sharp	AR-255		•
Sharp	AR-265FG		•
Sharp	AR-M 160	•	•
Sharp	AR-M 205	•	•
Sharp	AR-M 207	•	•
Sharp	AR-M 235	•	•
Sharp	AR-M 275	•	•
Sharp	AR-M 350	•	•
Sharp	AR-M 351U	•	•
Sharp	AR-M 400	•	•
Sharp	AR-M 450	•	•
STAR	NX-2420		•
TOSHIBA	E-161		•
TOSHIBA	Estudio-25		•
XEROX	Phaser 3310	•	•
XEROX	Able 3321		•
XEROX	Docuprint 240A	•	•